


# How to change the code on the combination lock



For new users, we recommend setting the code one dial at a time until you become familiar with the technique. We would also recommend checking the new code before closing the door and locking it.

1. Set the lock to the unlocked code (the factory default setting is 0-0-0) or your previously set personal combination.
2. There is a small hole on the side of the code lock which gives access to the reset button.
  - ↳ If you feel the spring of the reset button you can proceed with step 3.
  - ↳ If you do not feel the spring of the reset button, rotate the lock (this will be either fully clockwise or anti-clockwise depending on your product) and try again.
3. Using a pin, press and **HOLD** the reset button down.

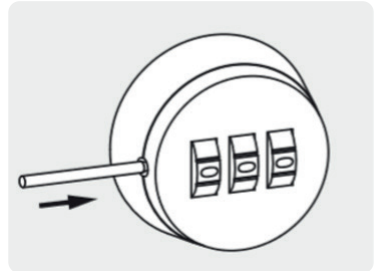

**CAREFUL** – Do not release the reset button until you have set and memorised your code. If you accidentally release the reset button the lock will be set to whatever code the lock is showing.

4. Set your desired code. Release the reset button to store your new code. Your new combination code is now set.